 


Valid for battery MM10030625 (CR1220)

The target group for this installation manual is trained qualified personnel entrusted with the technical functioning and operation of the unit.

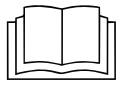

Read the installation instructions for the units and observe the safety information.

Safety instructions

Organizational measures

Risk of property damage and personal injury from lack of organizational measures

- Use equipment and protective gear suitable for the activity.

Danger of electric shock from live components.

- Prior to working on the electrical system, switch off the unit, disconnect the electrical system from the mains and prevent power from being switched on again. Check to ensure the system is dead.
- Use only insulated tools.

About this manual

The instructions describe how to replace the battery located on the circuit board of the operation panel. This requires the removal of the operation panel.

The battery is only responsible for keeping the date and time when the unit is switched off. However, operation is also possible with an empty battery.

Order of steps

- Removing the operation panel
- Remove the cover from the operation panel (only for SpaceSaver Team)
- Remove the circuit board cover from the operation panel
- Changing the battery
- Setting the date and time

Removing the operation panel

The removal of the operation panel is described in the back of the instructions.

- FlexFusion
- FlexFusion GEN2 (2024) and FlexFusion Team
- SpaceSaver
- SpaceSaver GEN2
- SpaceSaver Team (without hood)
- SpaceSaver Plus Team (with hood)

Replacing the battery Operation panel Combi steamer

Remove the cover of the circuit board on the operation panel

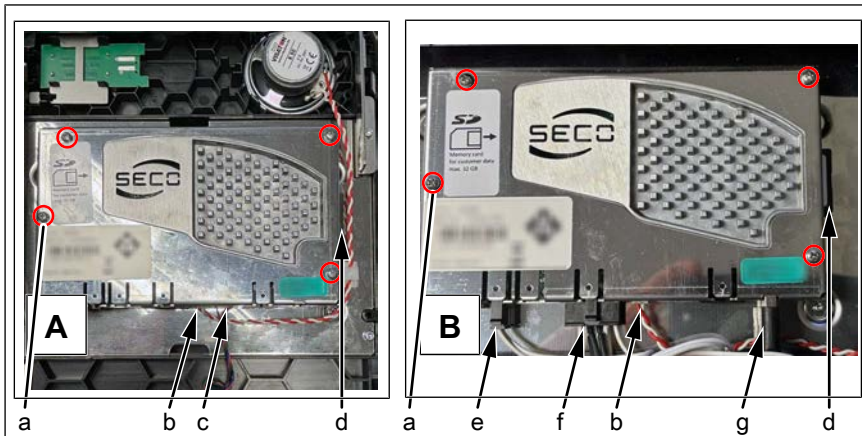


Image: A = back FlexFusion, B = back SpaceSaver (team)

- | | |
|---------------------|-------------------------------|
| a Cover screws | b Loudspeaker plug |
| c Plug LED field | d SD card |
| e Power supply plug | f CAN communication connector |
| g Plug USB cable | |

- Remove the SD card.
- Disconnect all plugs from the operation panel.
- Remove the screws and remove the cover.

Changing the battery

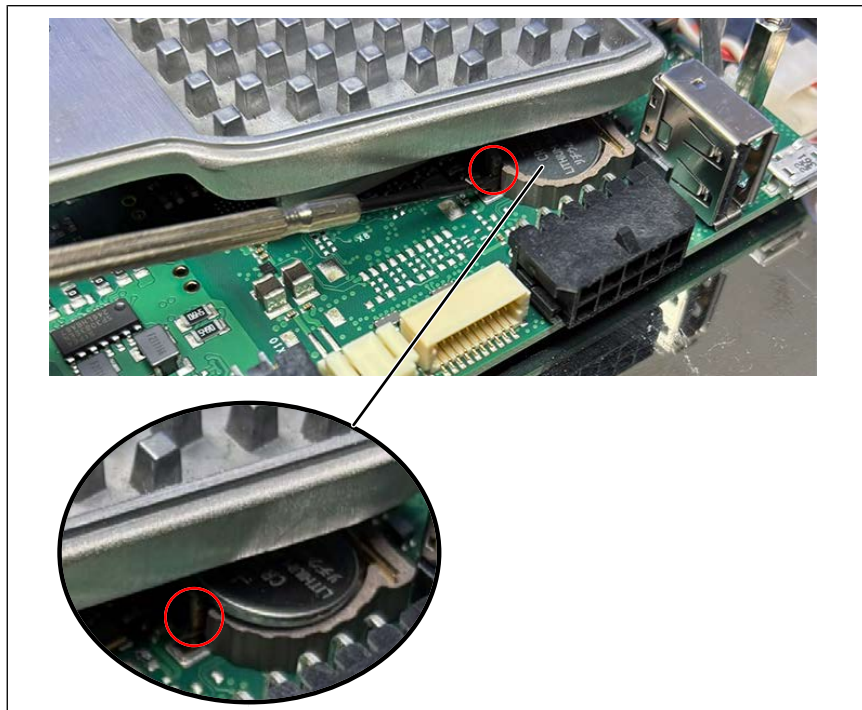


Image: Remove battery

- Carefully remove the battery. Use a small screwdriver for this.
- Insert the new battery and press lightly.

Fitting the cover and operation panel

→ Mounting is done in the reverse order. If necessary, fit the plug using needle-nose pliers.

Setting the date and time

Open the Service menu

INFORMATION


After replacing the battery, it is mandatory to set the date/time. Otherwise, the error message will continue to appear when the unit is switched on.

When the unit is switched on for the first time after replacement, the error message appears because the date/time has not yet been set.

Opening the Service menu

- Switch on the unit.
- Tap the "Unit functions" button.
 - ↳ Display of *Appliance functions* menu.
- Tap the "Settings" field.
 - ↳ Display of *PIN* window.
- Enter password "1967" and tap the *Confirm* button.
 - ↳ Display of the Service menu.

Setting the date and time

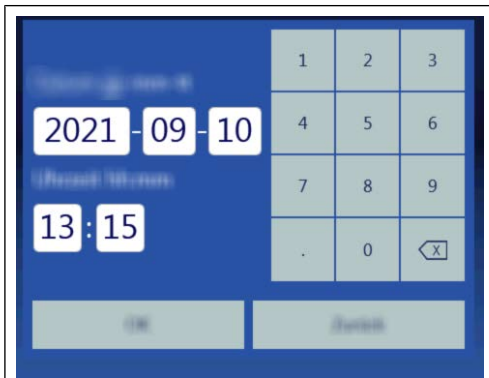

Prerequisite

- Open the Settings menu as described.
- Tap the "Set date and time" field.
 - ↳ The *Setting* window opens.
 - ↳ The *Keyboard* opens.
- Enter the date and time.
- Tap the Confirm button.
 - ↳ The *Keyboard* closes.
- ↳ The date and time are set.

Operation panel disassembly / assembly

FlexFusion

Opening the operation panel

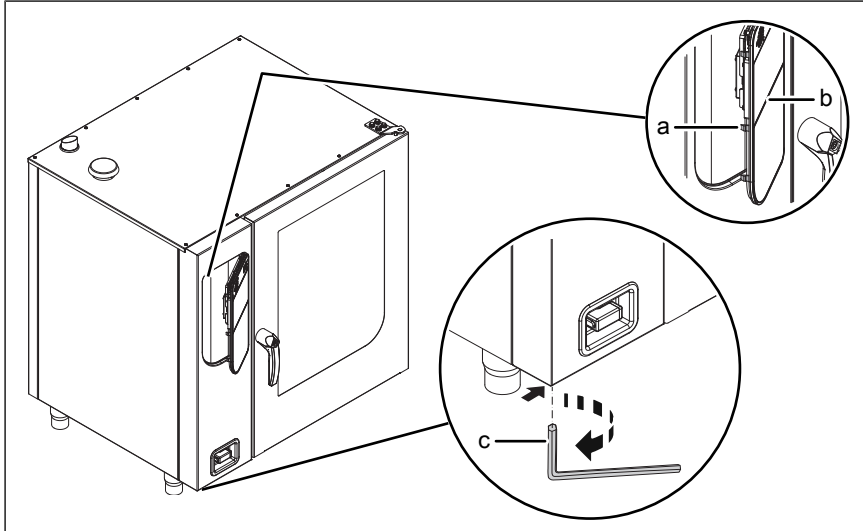


Image: Opening the operation panel

- | | | | |
|---|------------|---|-----------------|
| a | Lock (cam) | b | Operation panel |
| c | Hex key | | |

1. Insert hex key (5 mm) into screw and turn it clockwise.
 - ↳ The operating panel is now unlocked.
 - ↳ The operating panel pops up automatically.
2. Withdraw the hex key.

Removing the operation panel

- Disconnect the plug from the operation panel and remove the cable tie.
- Remove the operation panel by lifting it up.

FlexFusion GEN2

Opening the operation panel

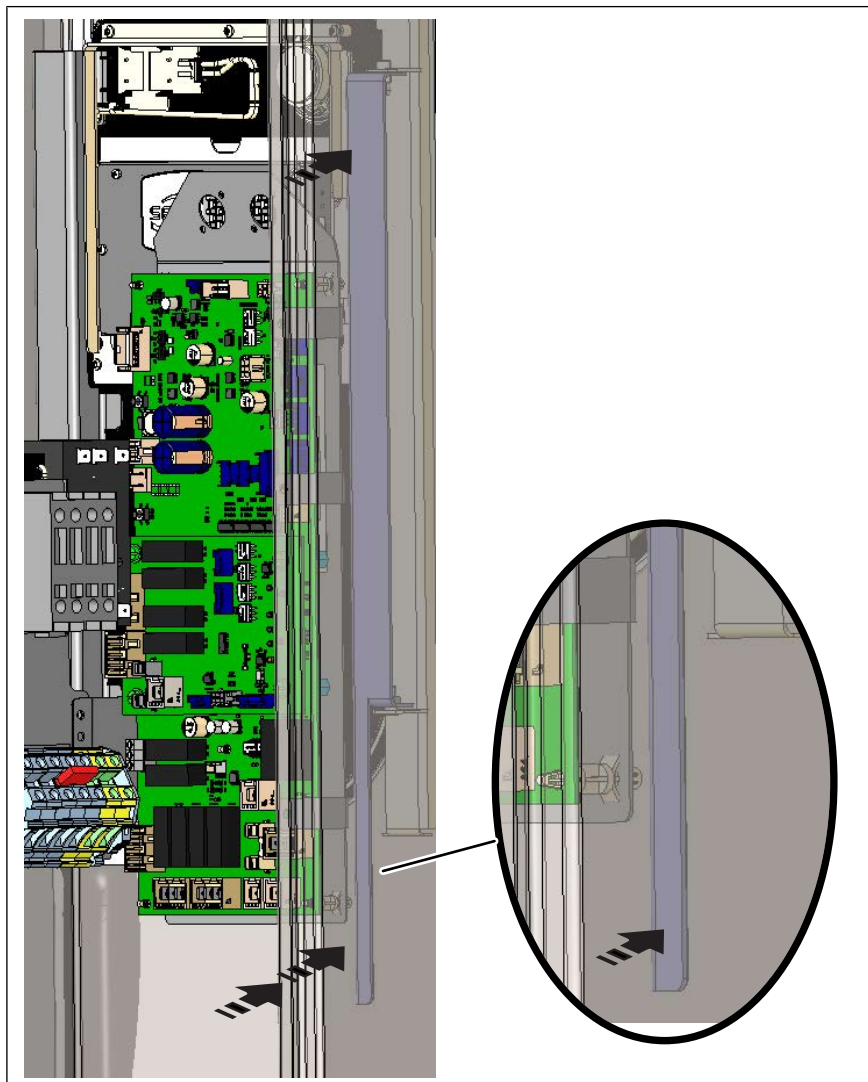


Image: Unlock the operation panel


1. Remove the left side wall.
2. Press the unlocking mechanism forwards.
↳ The operation panel is unlocked.
3. Opening the operation panel

Removing the operation panel

- Disconnect the plug from the operation panel and remove the cable tie.
- Remove the operation panel by lifting it up.

SpaceSaver

Removing the unit's cover

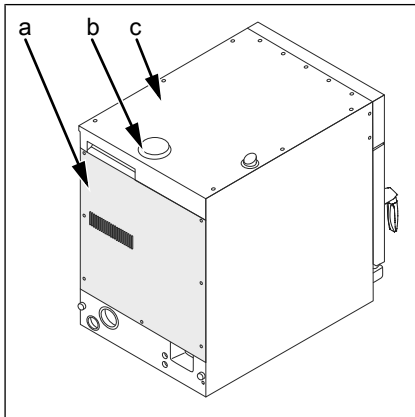

- a Rear panel
- b Air inlet nozzle cover

- c Unit cover

Remove unit cover

- Remove cover from air inlet nozzles by turning it.
- Remove the screws from the unit cover.
- Remove the unit cover.

Removing the operation panel

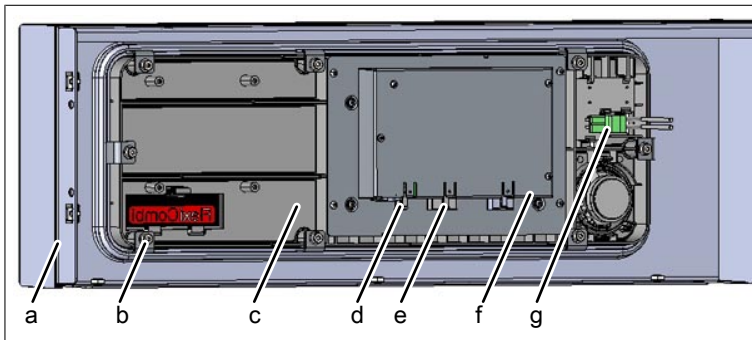



Image: Rear of operating panel

- a Front panel
- c Operation panel
- e Communication cable
- g Main switch cable

- b Operation panel fasteners (8x)
- d Power supply
- f USB port


- Disconnect all lines on the operation panel.
- Remove all screws from around the front panel.
- Remove the 8 screws fastening the operation panel.
 - ↳ Remove the operation panel from the front panel.
- Remove the SD card.

SpaceSaver GEN2 and SpaceSaver Team

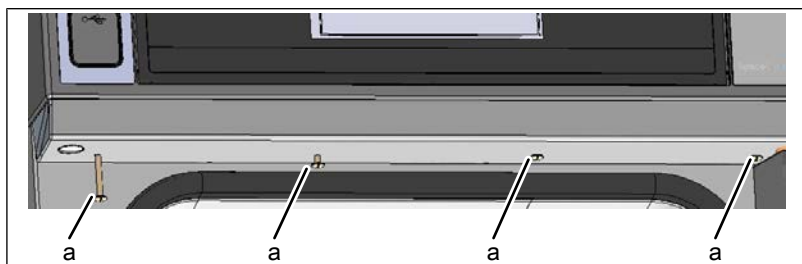


a Screw Mounting Operation Panel

- Open the cooking chamber door
- Remove the four fixing screws. For the outer screw in the area of the hinge, open the cooking chamber door approx. 30 -60°, otherwise access is not possible.

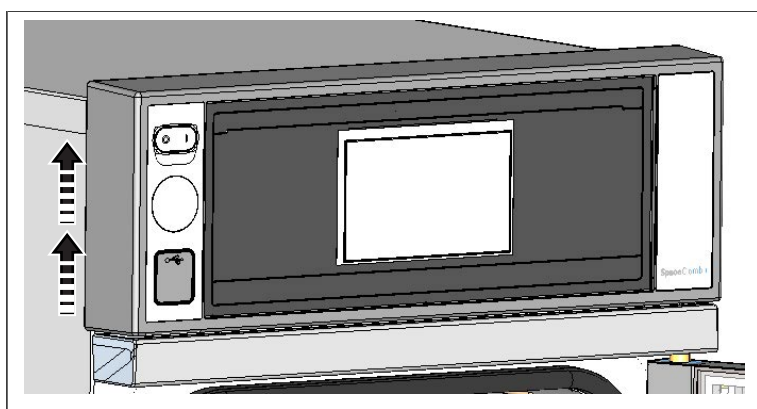


- Slide the operation panel upwards.

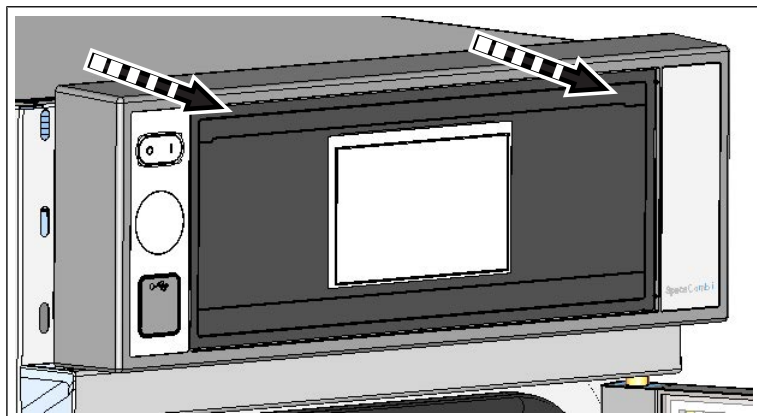

- Pull the operation panel forward.
- Disconnect all lines on the operation panel.
- Remove the operation panel.
- Remove the SD card.

SpaceSaver Plus Team (with hood)

Overview

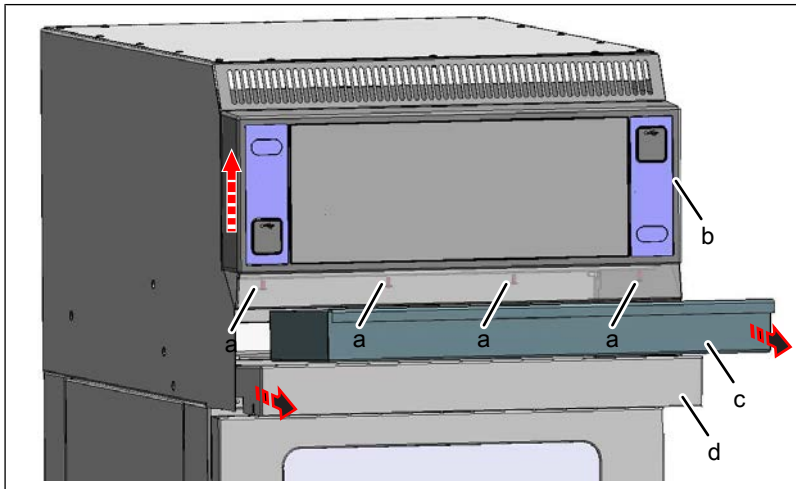

a Screw Mounting Operation Panel

c Filter drawer

b Operation panel

d Condensate tray

Disassembly

- Remove the filter drawer and condensate tray.
- Remove the four fixing screws.
- Pull the operation panel upwards and unhook it.
- Remove the cables leading to the operation panel.
- Remove the operation panel.

Remove the cover from the operation panel

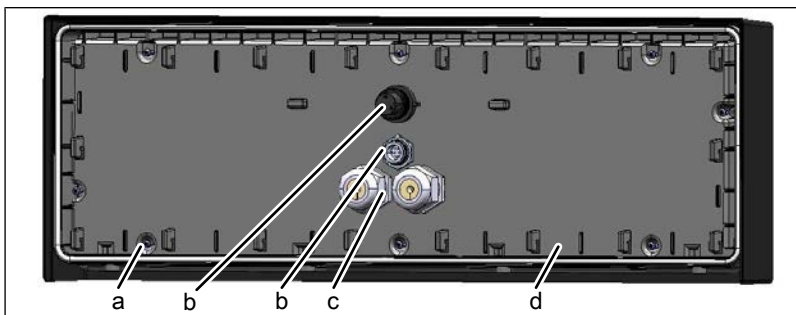


Image: Rear operation panel with cover

a Screw

c Network cable feed-through

b Line from the device

d Operation panel cover

- Remove the cover screws.
- Loosen the screw connection from the network cable bushings.
- Remove the cover.
- Do this on the new operation panel as well.