


6 Software update

- Requirement → USB stick.
→ Current software update.

Preparing USB stick

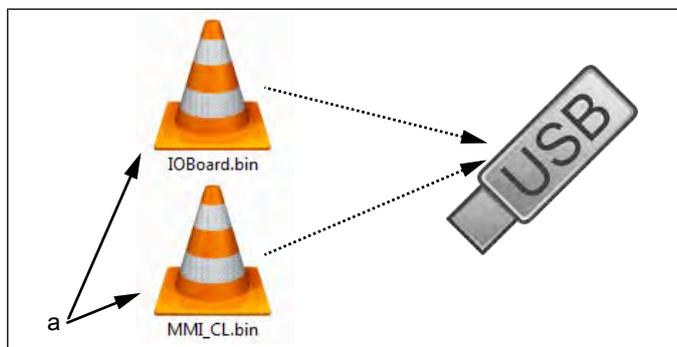


a Update files

- Copy **both** update files directly on the USB stick.
- ↳ The update always consists of two files.
 - ↳ The files have the extension "bin".
 - ↳ Update for control board: "IOBoard.bin".
 - ↳ Update for control panel: "MMI_CL.bin".



There must always be both files on the USB stick, otherwise no update is possible.

Insert the USB stick

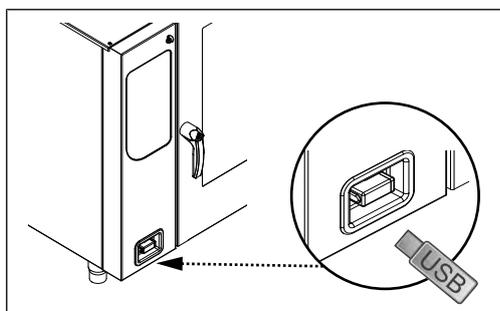

The USB port is located behind the cover in the lower left area of the housing.

Perform update



Image 4: SFL - software update

- Calling the service menu or setting menu (see „5.1.1 Calling service menu“, Page 10).
 - ↳ The password for the setting menu is 111.
- Select Software Update using the left rotary knob "SFL".



Image 5: USB stick with software update detected

- Press the "START STOP" button.
 - ↳ The left display shows "USb".
 - ↳ The middle display shows "SFL".



Image 6: USB stick or software update not detected

- The right display shows "no" when update is not detected on the USB stick.
 - ↳ Check contents of a USB stick. Both files must be available.
 - ↳ Check USB stick.



Image 7: Software update active - do not turn off unit

- Press the "START STOP" button for 3 seconds.
 - ↳ Update begins.
 - ↳ The middle display shows "---".



The update can take up to 20 minutes to complete. The software will be restarted several times. Do not turn off unit.

- ↳ Finally an automatic restart of the software occurs.