 


Valid for operation panel MM10033200

INFORMATION

This operation panel requires software version 3.xx and associated additional content



Read the installation instructions for the units and observe the safety information.

The target group for this installation manual is trained qualified personnel entrusted with the technical functioning and operation of the unit.

Safety instructions

Organizational measures

 
Risk of property damage and personal injury from lack of organizational measures

- Use equipment and protective gear suitable for the activity.

Danger of electric shock from live components.

- Prior to working on the electrical system, switch off the unit, disconnect the electrical system from the mains and prevent power from being switched on again. Check to ensure the system is dead.
- Use only insulated tools.

Check before replacing



Troubleshoot using the service manual.

Order of steps

- Backing up data if service menu can be accessed
- Exporting your own cooking programs to a USB stick (if available)
- Removing the operation panel
- Transferring the SD card to the new operation panel
- Attaching the film keypad
- Updating the software and importing additional content
- Setting the date and time
- Restoring data
- Importing your own cooking programs from a USB stick
- Loading optional OEM settings and selecting a cookbook

INFORMATION

Update each of the two units separately. Two independent controls are involved.

Preparing the USB stick

Prerequisite


- USB stick.
 - ↳ Formatting FAT (standard).
 - ↳ The disk should be empty if possible.
- Latest software update and additional content
 - ↳ The update is available on the manufacturer's website.

INFORMATION

The additional content contains sound files and graphics. These must be installed after replacing the operation panel.

Preparing the USB stick

- Open and unzip the downloaded zip file.
- Copy the unpacked folders "MMIUpdate", "Content_CODG2" and "Cooking_CODG2" into the main directory of the USB stick. The content and folder structure must not be changed.

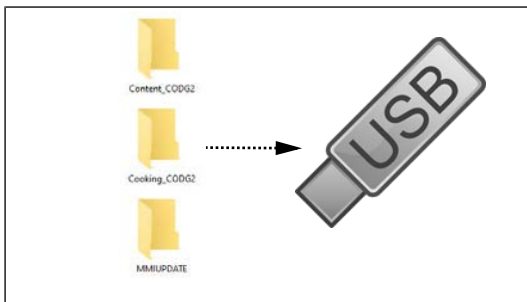

Opening the Settings menu and Service menu

Replacement requires access to the Settings menu, Basic settings and Service menu.

Calling up the Setting menu

- Switch on the unit.
- Tap the "Unit functions" button.
 - ↳ Display of *Appliance functions* menu.
- Tap the "Settings" field.
 - ↳ Display of *PIN* window.
- Enter password "111" and tap the *Confirm* field.
 - ↳ Display of Device Settings menu.

Opening the Service menu

- Switch on the unit.
- Tap the "Unit functions" button.
 - ↳ Display of *Appliance functions* menu.
- Tap the "Settings" field.
 - ↳ Display of *PIN* window.
- Enter password "1967" and tap the *Confirm* button.
 - ↳ Display of the Service menu.

Backing up data

Backup function for parameters (for example, customer settings, calibration values). Saving data on the internal SD card and USB stick (if plugged in).

1. Open the Service menu as described.
2. Tap the "Backup data" field.
3. Touch the *Confirmation* field.
 - ↳ Backup data on the SD card.
 - ↳ A confirmation then appears on the touchscreen.
4. Tap the "OK" field.

Exporting your own cooking programs




a buttonAutoChef

- Switch on the unit.
- Insert the USB flash drive.
- Tap the "autoChef" button.
 - ↳ Display of *Automatic cooking (autoChef)* menu.
- Tap the "autoChef" button in the information strip.
 - ↳ Display of *autoChef* window.
- Tap the "Export cooking programs" field.
- Tap the *Confirm* button.
 - ↳ All user-created cooking programs are exported to the USB stick from the cookbook.
 - ↳ A confirmation then appears on the touchscreen.

Removing the operation panel

SpaceSaver Plus Team (with hood)

Overview

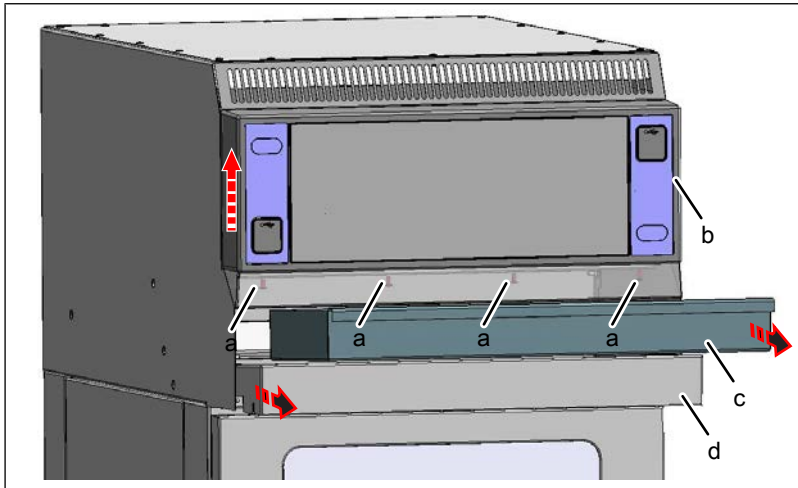

- a Screw Mounting Operation Panel
- c Filter drawer


- b Operation panel
- d Condensate tray

Disassembly

- Remove the filter drawer and condensate tray.
- Remove the four fixing screws.
- Pull the operation panel upwards and unhook it.
- Remove the cables leading to the operation panel.
- Remove the operation panel.

SpaceSaver Team (without hood)

Overview

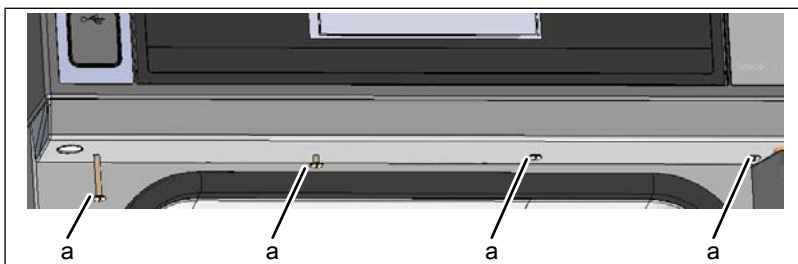

- a Screw Mounting Operation Panel

Disassembly

- Remove the filter drawer and condensate tray.
- Remove the four fixing screws. For the outer screw in the area of the hinge, open the cooking chamber door approx. 30 -60°, otherwise access is not possible.
- Pull the operation panel upwards and unhook it.
- Remove the cables leading to the operation panel.
- Remove the operation panel.

Removing and transferring SD cards

Remove the cover from the operation panel

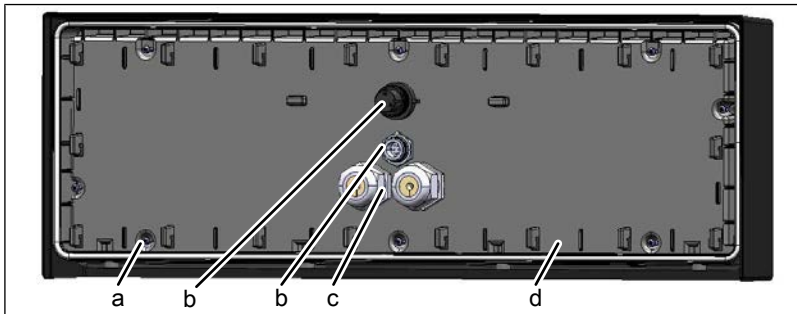


Image: Rear operation panel with cover

- | | |
|------------------------------|-------------------------|
| a Screw | b Line from the device |
| c Network cable feed-through | d Operation panel cover |

INFORMATION

To access the SD cards, remove the cover from the operation panel.

INFORMATION

The SD cards must be removed from the dismantled operation panel. This includes the manufacturer's cookbook.

- Remove the cover screws.
- Loosen the screw connection from the network cable bushings.
- Remove the cover.
- Do this on the new operation panel as well.

Transfer SD card

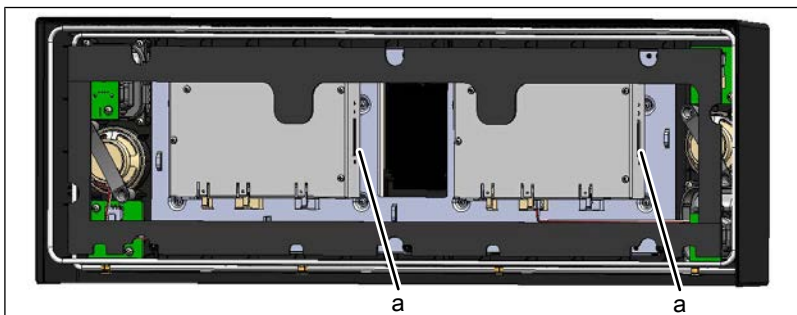


Image: Rear operation panel without cover

- a Slot for SD card

- Remove the SD cards from the new operation panel. These are not required.
- Take both SD cards from the removed operation panel. Note the assignment (left/right). Do not swap SD cards.
- Fit the plastic cover.

Attaching the film keypad

→ Prepare the new operation panel. Affix included foil.

Installing the operation panel

Mounting is done in the reverse order.

- Attach plug
- Attach operation panel
- Fitting the screws
- Insert the condensate tray and filter drawer.

Updating the software

- Insert the USB stick
- Switch on the unit.
 - ↳ Follow the instructions on the touchscreen

INFORMATION

The update can take up to 15 minutes.

- ↳ A confirmation then appears on the touchscreen
- Tap the "OK" field
 - ↳ The software restarts automatically

INFORMATION

After the update, a blue screen may appear and the software does not start. In this case, switch the unit off and then back on. In rare cases, this may happen again.

Import additional content

- Insert the USB stick.
- Open the Service menu as described.
- Select the field "Import additional contents" on the left area of the menu by swiping.
- Tap the "Import additional contents" field.
- Tap the "OK" field.
 - ↳ The data is imported.
- A confirmation then appears on the touchscreen.
- Tap the "OK" field.

Restoring data

1. Open the Service menu as described.
2. Tap the "Restore data" field.
3. Touch the *Confirmation* field.
 - ↳ Restore data from the SD card.
 - ↳ A confirmation then appears on the touchscreen.
4. Tap the "OK" field.

Importing your own cooking programs

- Switch on the unit.
- Insert the USB flash drive.
- Tap the "autoChef" button.
 - ↳ Display of *Automatic cooking (autoChef)*. menu.
- Tap the "autoChef" button in the information strip.
 - ↳ Display of *autoChef*. window.
- Tap the "Import cooking programs" field.
- Tap the *Confirm* button.
 - ↳ All cooking programs on the USB stick are imported to the cookbook.
 - ↳ A confirmation then appears on the touchscreen.

Settings

Setting the date and time




Prerequisite

- Open the Settings menu as described.
- Tap the "Set date and time" field.
 - ↳ The *Setting* window opens.
 - ↳ The *Keyboard* opens.
- Enter the date and time.
- Tap the Confirm button.
 - ↳ The *Keyboard* closes.
- ↳ The date and time are set.

OEM settings

Loading settings

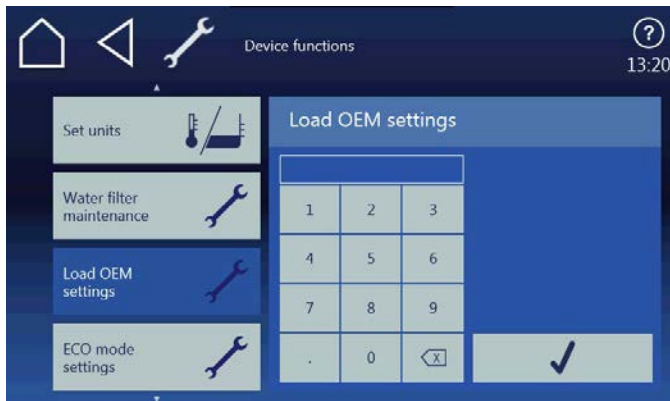

INFORMATION

The HennyPenny OEM code is 110000

- Open the Settings menu as described.
- Wipe to select the page with the "Load OEM settings" field in the left menu area.
- Tap the "Load OEM settings" field.
- Enter the OEM code and tap the *Confirm* field.
 - ↳ The data is loaded.
- ↳ The software restarts automatically.

INFORMATION

A different OEM code may be required for some customer groups.

Select cookbook

INFORMATION

After the OEM settings have been loaded, select the cookbook.



- Open the Settings menu as described.
- tap on "Select cookbook".
- Select cookbook and confirm with OK.
- Restart the device using the button *On Off*.