

Valid for cooking chamber seals 211096, 10018052



Read the installation instructions for the units and observe the safety information.

The target group for this installation manual is trained qualified personnel entrusted with the technical functioning and operation of the unit.

Required tools

- Cloth
- warm water with commercially available cleaning agent

Remove seal



Image: Remove tray trolley

1. Remove tray trolley.

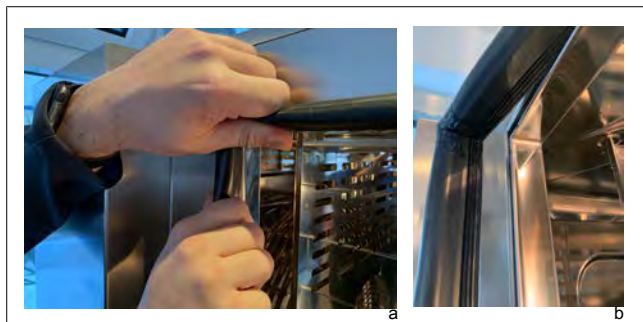


Image: Start at one of the top corners

1. First loosen the seal at one of the upper corners.
2. Then pull out the complete seal.
3. Remove any sealing residues.

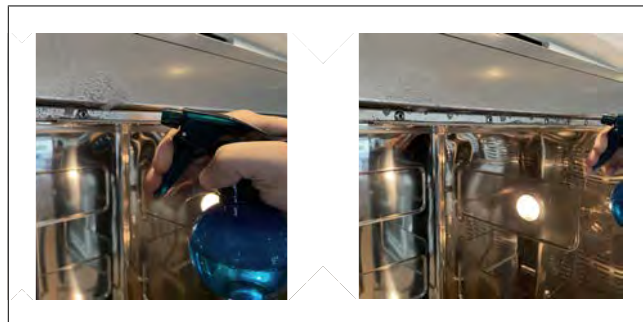


Image: Clean very thoroughly

All coarse sealing residues removed.

1. Thoroughly spray groove for sealing profile with warm soapy water.

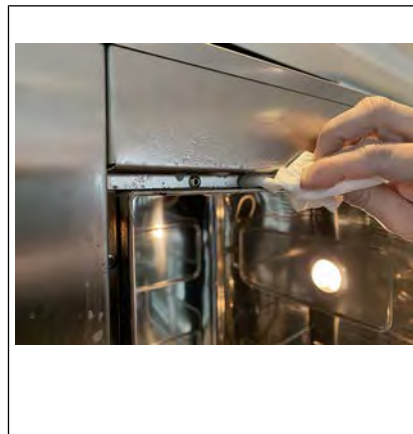


Image: Wipe out with a cloth

1. Thoroughly wipe out the groove with a cloth.
2. Completely remove all soiling, for example grease residues.

INFORMATION

For a good fit of the new cooking chamber seal, it is important that the groove is very well cleaned.

Replacing the cooking chamber seal Combisteamer floor-standing unit

Install seal



Image: The lower part of the door seal is reinforced in the corners.

INFORMATION

The lower part of the seal is reinforced in the corners and is also mandatory to install at the bottom.

Therefore, check beforehand which part of the seal feels tighter.

This part must be used at the bottom.

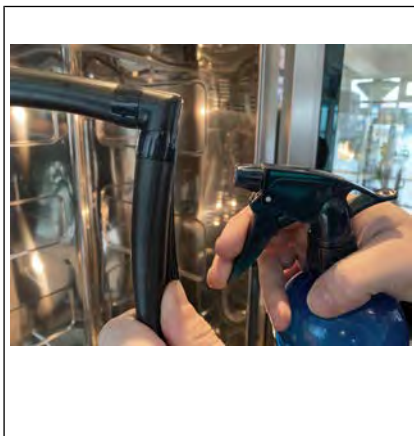


Image: Prepare new seal

1. Spray the seal with soapy water to help it slide into the groove.

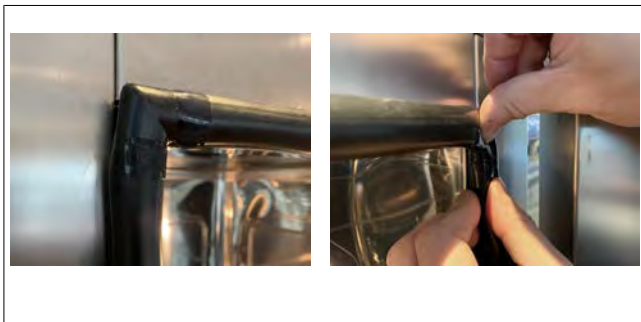


Image: Insert seal at the top corners first

1. First press in the two upper corners one after the other.
2. Put on and press from the front, do not push in from the side
3. Then press in the two bottom corners.




Image: Always press in the seal from the center outwards

The four corners sit firmly in the groove

1. Start in the middle between two corners.
2. Press the seal evenly into the groove.
3. Only press from the front and do not extend or stretch.
4. Always work from the center to the corners.



Correct

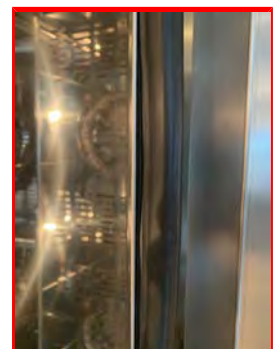

Incorrect

Image: Cooking chamber seal must sit straight and without waves in the profile

1. Check whether the seal is evenly applied everywhere.
2. If not - rework.