


1 Applies to operating panel FlexiCombi Team



Read the installation instructions for the units and observe the safety information.

The target group for this installation manual is trained qualified personnel entrusted with the technical functioning and operation of the unit.

2 Safety instructions

Organizational measures

Risk of property damage and personal injury from lack of organizational measures

- Use equipment and protective gear suitable for the activity.

Danger of electric shock from live components.

- Prior to working on the unit, switch off the unit, disconnect the unit from the mains and prevent power from being switched on again. Check to ensure the system is dead.

3 Removing the operating panel

Prerequisite

Unit disconnected from the electric supply mains

Water connection closed

Left side wall removed

Cooking chamber door opened.

Order of steps:

- Removing the operating panel
- Remove threaded fasteners from operating panel
- Loosen nuts of operating panel
- Loosening the fan
- Removing the operating panel
- Removing the hand shower

Preparation

1. Operate hand shower to reduce the water pressure.

Removing and attaching the operating panel

Removing the operating panel

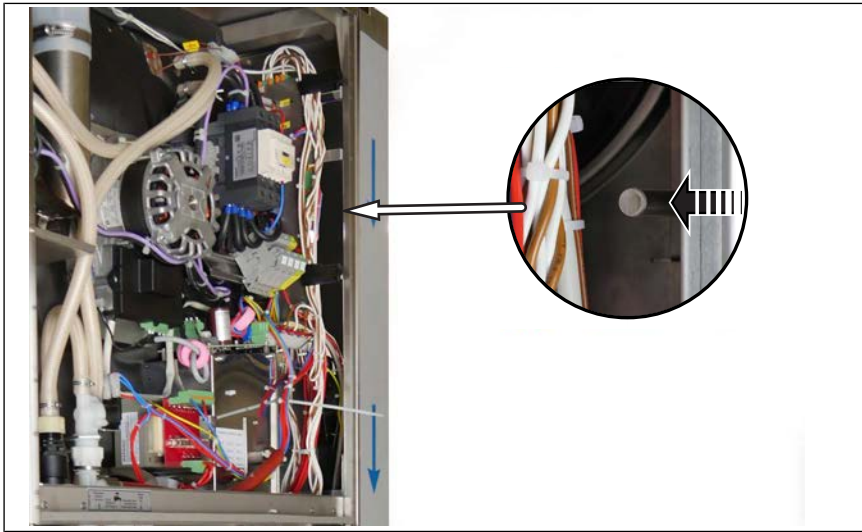


Image: Unlock the control panel

2. Reach through the open side wall to the release lever.
3. Press the release lever towards the unit.
↳ The operating panel is released from the operating panel.



Image: Operating panel with and without cables

4. Mark and detach cables from the upper unit.
5. Detach cables from the lower unit.
6. Detach the remaining cables.
7. Push the operating panel up slightly and remove it.
8. Place the operating panel in a safe location.

Unscrewing the slotted-head screws from the operating panel

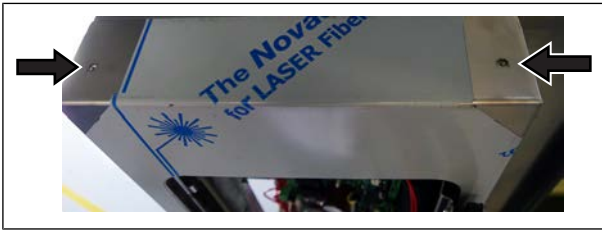


Image: Screws on top

9. Unscrew both slotted-head screws on the top of the operating panel.



Image: Screws at center

10. Unscrew both slotted-head screws on the right side of the operating panel between the cooking chambers.

Loosen nuts of operating panel

INFORMATION

Only loosen the nuts; do not remove them completely, as otherwise problems may arise during reassembly.

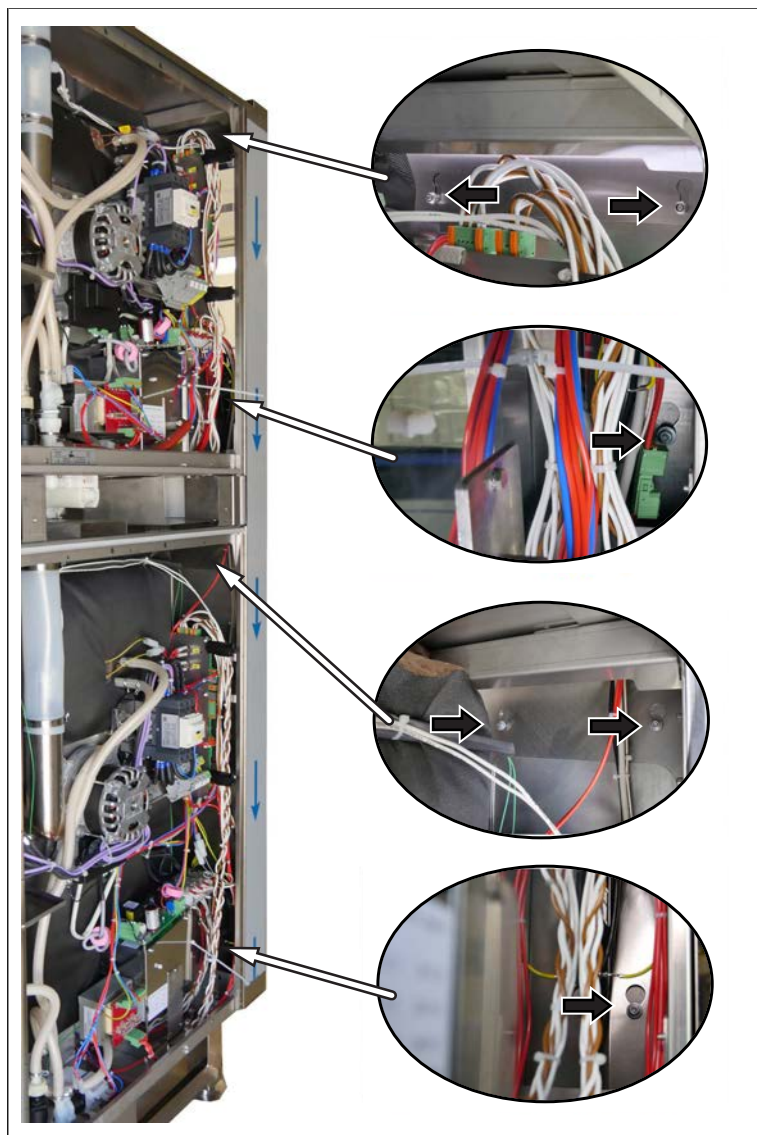


Image: Six nuts on rear side of the operating panel

11. Loosen these six nuts on the rear side of the operating panel.

Loosening the fan

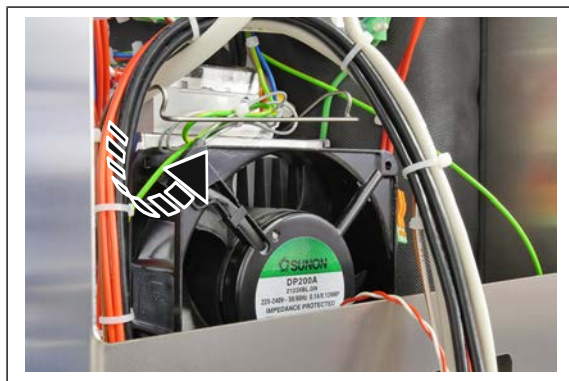


Image: Release the fan retainer.

12. Disconnect the ground cable from the fan

13. Release the fan retainer.

14. Pull the fan forward slightly and release it.

↳ The fan now lies loose on the housing of the hand shower.

Removing the operating panel

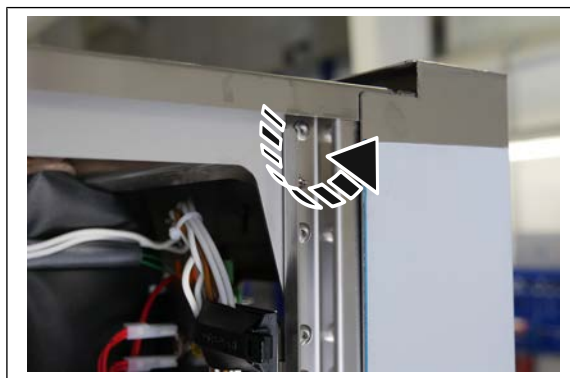


Image: Raising the operating panel slightly and then pushing up

15. Lift the operating panel away from the unit slightly at the top left.

↳ The operating panel can slide over the sheet metal above.

16. Push the operating panel up slightly and then lift off.

Removing the hand shower

NOTICE

Risk of hose damage from sharp edges and uncontrolled retraction

The hose is under tension in its compartment. Hold the hose securely during assembly.

When rolling up and unrolling the hose, do not allow it to come into contact with metal edges.

17. Screw off the hand shower from the hose.

18. Push the hose out of the bushing in the operating panel.

19. Screw the hand shower back onto the hose and allow the hose to roll up slowly.

20. Remove the operating panel completely.

4 Attaching the operating panel

Prerequisite

Unit disconnected from power

Water connection closed

Left side wall removed

Cooking chamber door open

Fan removed

1. Set the operating panel down in front of the installation site.

2. Guide all necessary cables through the opening in the operating panel.

Attaching the hand shower

NOTICE

Risk of hose damage from sharp edges and uncontrolled retraction

The hose is under tension in its compartment. Hold the hose securely during assembly.

When rolling up and unrolling the hose, do not allow it to come into contact with metal edges.

Removing and attaching the operating panel

3. Screw off the hand shower from the hose.
4. Push the hose through the bushing in the operating panel.
5. Screw the hand shower back onto the hose and allow the hose to roll up slowly.

Attaching the operating panel

6. Hold operating panel against the left side, bend the right side back slightly and then carefully push up about 1 centimeter.

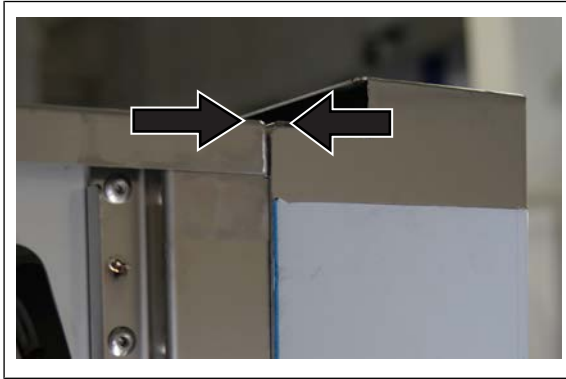


Image: Edges align at the top

7. Push the operating panel up until the edges at the top align.
 - ↳ The pins on the operating panel are now positioned correctly in front of the mounting holes.
8. Lift the fan and place it on the bushing for the hand shower.

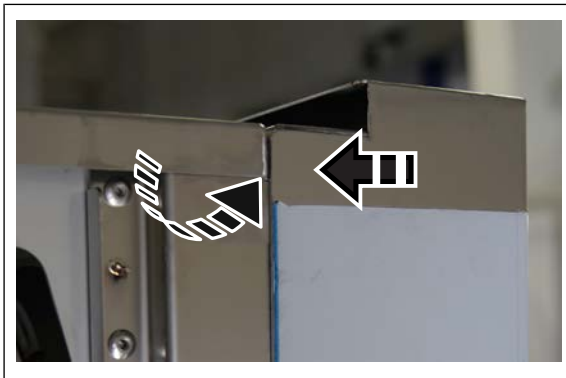


Image: Raise edges slightly and then push over

9. Lift the operating panel away from the unit slightly at the top left.
 - ↳ The operating panel can slide over the sheet metal above.
10. Push the operating panel up.



Image: Correct positioning of the pins

11. Check for correct positioning of the pins.

↳ The two upper pins do not have washers.

↳ The 6 other pins have washers that must be behind the sheet metal retainer.

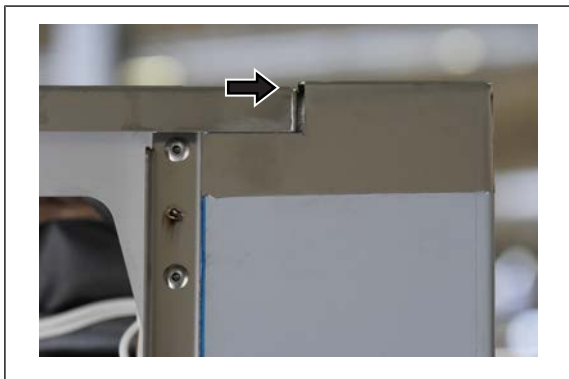


Image: Operating panel fitted correctly

12. Push the operating panel down until it rests flush with the housing cover.

Fastening the operating panel

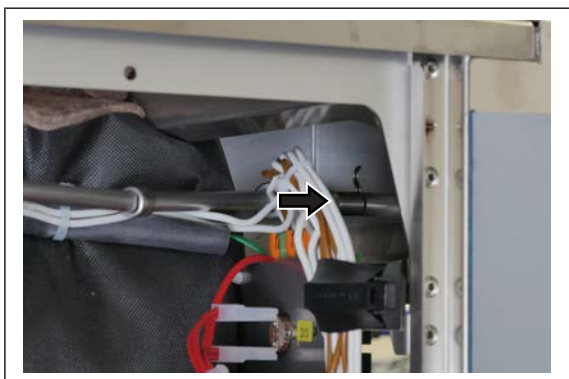


Image: Insertion of the swivel joint at upper row on unit

NOTICE

Risk of forming dimple in the operating panel from tightening nut too securely

- Tighten nut only to the point where it comes in contact with the sheet metal.
- The tightening torque should be as low as possible.

Removing and attaching the operating panel

13. Using a universal joint socket, tighten top nut in the row on the unit.
14. Using a universal joint socket, tighten the third nut from the top in the row on the unit.
15. Tighten all nuts in the other row.
16. Screw on 2 slotted-head screws each at the right and the top.

Fastening the fan



Image: Placing the fan in the lower holder

17. Place the fan in the lower holder.
18. Swing the fan up and lock it in place with the retainer.
19. Attach the ground cable.

Fastening the operating panel

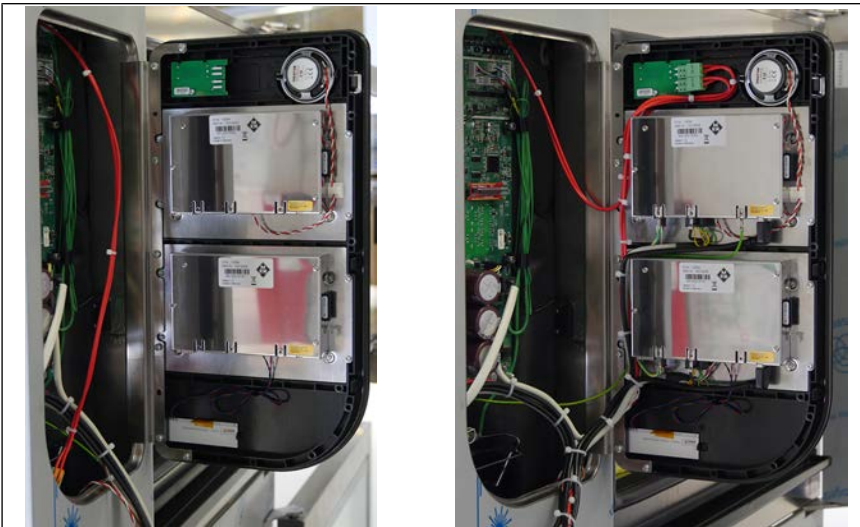


Image: Operating panel without and with cables

20. Insert operating panel on one side.
 21. Attach cables.
 22. Swing the operating panel closed until it engages audibly.
- ↳ The operating panel is attached.